

Brass Push-In Fitting Type for Spatter-Proof Tube Fitting Brass Series

- HNBR, FKM, NBR for Seal Rubber Selection
 - Resistant to Flame and Weld Spatter
- Superior in Flame-Retardant and Spatter-Proof by its Brass Made Release-Ring
 - Avoiding Spatter and Dusts by Protective Cover
 - Optional Release-Ring Cover "CS" prevents Tiny Sparks from penetrating into Fitting

Optional release-ring cover keeps tiny sparks away from penetrating through the gap between release-ring and tube.










Fitting

Coupling

Color Cap 213

Mini Series

■ Model Designation (Example)

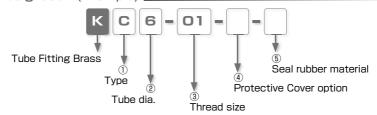

1) Type

Code	Туре	Code	Туре	Code	Туре	Code	Туре
С	Straight	ОС	Inner Hex. Straight	L	Elbow	В	Branch Tee
D	Run Tee	Η	Single Banjo	U	Union Straight	٧	Union Elbow
Е	Union Tee	Υ	Union Y	М	Bulkhead Union		

2 Tube dia.

Tube dia.		mm size							
Code	4	6	8	10	12				
Size (mm)	ø4	ø6	ø8	ø10	ø12				

3 Thread size

Thread size	Metric thread (mm)		Taper pipe		
Code	M5	M5 01		03	04
Size	M5 × 0.8	R1/8	R1/4	R3/8	R1/2

4 Protective Cover option

No code: with cover

1: without cover



(5) Seal rubber material

No code: HNBR
F: FKM (option)
N: NBR (option)


Specifications

Fluid medium	Air / Water (※)					
Max. operating pressure	1.0MPa					
Max. vacuum	-100kPa					
Operating temp. range	HNBR: $0\sim100^\circ\mathbb{C}$ 、FKM: $0\sim120^\circ\mathbb{C}$ 、NBR: $0\sim60^\circ\mathbb{C}$ (No freezing)					

- * . Make sure to follow the instructions below when the fluid medium is water.
 - Surge pressure must be controlled lower than max. operating pressure when using water as a fluid medium.
 - 2. Be sure to place Insert Ring into the tube edge when using water as a fluid medium. There is a possibility to cause the escape of tube and a fluid leakage without Insert Ring.

PISCO http://www.pisco.co.jp

■ Construction (Elbow: KL HNBR with cover)

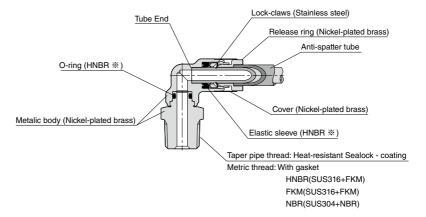

*. FKM when selecting "F" for Seal rubber material, NBR when selecting "N".


Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" on page 23 to 27 and "Common Safety Instructions for Fittings" on page 33 to 35.

Warning

- 1. When the fluid medium is water, do not use Tube Fitting Brass series unless the operating environment meets all the described specifications in the catalog. Otherwise, it may cause damage to the products, the escape of tubes and a fluid leakage.
- Tube fitting Brass Series has seal rubber material options, but there is no way to identify between each material. Store each product properly not to mix up, after opening their packages.
- Thread body of some types in Tube Fitting Brass series is rotatable. Do not rotate and swing it by force or continuously. It may cause damage to the products and a fluid leakage.
- 4. Select seal rubber material considering sufficient margin to the operating temperature range. Seal rubber material can be worn out by heat and may cause a fluid leakage. Perform maintenance periodically and in case leaks are found, replace the product to the new one promptly.

Caution

1. When using Anti-spatter Tube, peel the cover as the following table shows. It may cause the escape of a tube, a fluid leakage or make it impossible to insert the tube into Push-In Fitting, if the tube is not peeled properly.

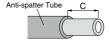

Tube dia.	Ø 4mm	Ø 6mm	Ø 8mm	Ø 10mm	Ø 12mm	
Peeled length (C)	15mm	16mm	17mm	19.5mm	23mm	

Anti-spatter & Brass Series

Minimal

Stop Fitting Series

Series Twist-Proof

Coupling

olor

Tube Fitting Brass Series

FITTIN

Standard Size List

Connection: Thread ⇔ Tube

Type	Dogo	Thread size		Tub	e O.D. (mm)	
Type	rage	Tilleau Size	4	6	8	10	12
KC Straight	P.217	M5 × 0.8	•	•			
		R1/8	•	•	•	•	
		R1/4	•	•	•	•	•
		R3/8		•	•	•	•
		R1/2				•	•
KOC Inner Hex. Straight	t P.219	M5 × 0.8	•	•			
		R1/8	•	•	•	•	
		R1/4	•	•	•	•	•
		R3/8		•	•	•	•
		R1/2				•	•
KL Elbow	P.221	M5 × 0.8	•	•			
		R1/8	•	•	•	•	
		R1/4	•	•	•	•	•
		R3/8		•	•	•	•
		R1/2				•	•

Type	Dogo	Thread size		Tube	e O.D. (r	nm)	
туре	rage	Tilleau Size	4	6	8	10	12
KB Branch Tee	P.223	M5 × 0.8	•	•			
		R1/8	•	•	•	•	
		R1/4	•	•	•	•	•
		R3/8		•	•	•	•
		R1/2				•	•
KD Run Tee	P.225	$M5 \times 0.8$	•	•			
		R1/8	•	•	•	•	
		R1/4	•	•	•	•	•
		R3/8		•	•	•	•
		R1/2				•	•
KH Single Banjo	P.227	M5 × 0.8	•	•			
		R1/8	•	•	•		
		R1/4		•	•	•	
		R3/8		•	•	•	•
		R1/2				•	•

Connection: Tube ⇔ Tube (Equal dia.)

Time	Dogo		Tub	e O.D. (n	nm)	
Type	Page	4	6	8	10	12
KU Union Straight	P.229	•	•	•	•	•
KV Union Elbow	P.230	•	•	•	•	•
KE Union Tee	P231	•	•	•	•	•

Time	Page		Tube O.D. (mm)							
Type		4	6	8	10	12				
KM Bulkhead Union	P.232	•	•	•	•	•				
KY Union Y	P.233	•	•	•	•	•				

How to insert and disconnect

1. How to insert and disconnect tubes

1) Tube insertion

Insert a tube into Push-In Fitting Brass series up to the tube end. Lock-claws bite the tube and fix it automatically, then the elastic sleeve seals around the tube.

Refer to "2. Instructions for Tube Insertion" under "Common Safety Instructions for Fittings".



2 Tube disconnection

The tube is disconnected by pushing release-ring to release Lock-claws. Make sure to stop air supply before the tube disconnection.




2. How to tighten thread

① Tightening thread

There are two ways to tighten thread. Use a spanner or an impact wrench for a hexagonal-column. A hex key is for an inner hexagonal socket. Inner hex type can save spaces.

Refer to "Table 2: Recommended tightening torque / Sealock color / Gasket materials" under "4. Instructions for Installing a fitting" in "Common Safety Instructions for Fittings".



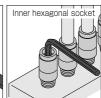

215

Mini Series Stainless Series Chemica

Series

PP
Serie


EG
Serie

Arro-spatte & Brass Ser



3. How to install Release-ring cover

Attach the cover on release-ring of Brass Series and insert a tube.

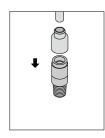

■ Applicable Tube and Related Products

Anti-spatter TubeP.646

Tube Fitting Anti-spatter SeriesP.204

Speed Controller Anti-spatter P.422

Speed Controller Brass......P.430

Throttle (Needle) Valve Brass P.474










Counting


olor

Straight

RoHS compliant



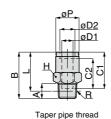

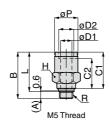



Unit: mm

Model code	Tube O.D. øD1	Tube O.D. øD2	R	øΡ	В	Tube end C1	Tube end C2	А	L	Hex. H	Orifice dia.	Effective area (mm²)	Weight (g)	
KC4-M5-□	4		$M5\!\times\!0.8$		22.7			2.9	19.8	10	1.8	2	12	
KC4-01- □		6	R1/8	9.8	23.7	17.6	17.6 15	8	19.7	10	2.5	4.5	13	
KC4-02-			R1/4		26.7			11	20.7	14	2.5	4.5	22	
KC6-M5- □			M5×0.8		25.5		16.3	2.9	22.6	12	1.8	2	17	
KC6-01- □	6	6 8	R1/8	11.8	25.1	19.5		8	21.1	12			14	
KC6-02-□	ь	0	0 0	R1/4	11.0	29.1		10.5	11	23	14	4	11	23
KC6-03-□			R3/8		25.1			12	22.7	17			34	
KC8-01- □			R1/8	29.9 13.8 28.6 28.9			8	25.9	14			27		
KC8-02-□	8	10	R1/4		28.6	20.2	0.2 17.2	11	22.6	14	6	20	25	
KC8-03-			R3/8		28.9			12	22.0	17			32	
KC10-01-			R1/8		33.3			8	29.3		6	23	40	
KC10-02-	10	12	R1/4	16.9	33.3	23.2	19.5	11	27.3	17			39	
KC10-03-	10	12	R3/8	10.9	31.8	23.2	19.5	12	25.5		8	35	46	
KC10-04-□			R1/2		35.8			15	27.6	22			67	
KC12-02-			R1/4	/8 20	38.9			11	32.9	21	8.5	47	61	
KC12-03-	12	14	R3/8		34.9	26.3	22.3	12	28.6	۷1		50	62	
KC12-04-			R1/2		36.9			15	28.7	22	9	50	74	

 $[\]frak{\%}$ 1. "L" is a reference value for height dimension after tightening taper thread.

Mini Series

^{※ 2. ☐} in Model code / Replaced with "N"(NBR), or "F"(FKM) for Seal rubber material change